

# ASSEMBLY INSTRUCTIONS

AC2 THRU AC7 ADJUSTABLE UNDER-COUNTER RACKS

## TOOLS REQUIRED FOR INSTALLATION:


1. PHILLIPS DRIVE SCREW DRIVER
2. DRILL WITH 1/8" DRILL BIT
3. TAPE MEASURE OR RULER
4. PENCIL
5. 6 EACH SCREWS FOR ATTACHING RACK TO CABINET

## INSTALLATION INSTRUCTIONS:

1. ADJUSTABLE UNDER-COUNTER RACKS MUST BE PROPERLY INSTALLED FOR BEST RESULTS.

NOTE: THE WIDTH OF THE CABINET THE "AC" UNDER-COUNTER RACK IS INSTALLED IN SHOULD BE NO MORE THAN 7/8" WIDER THAN THE LENGTH OF THE HANGERBAR TO BE USED IN THE UNDER-COUNTER RACK

HANGERBAR MODEL (LENGTH)	REQUIRED INSIDE CABINET WIDTH
IHB-2100 (20-1/4")	21-1/8"
IHB-2400 (23-3/4")	24-5/8"
IHB-3000 (29-1/4")	30-1/8"

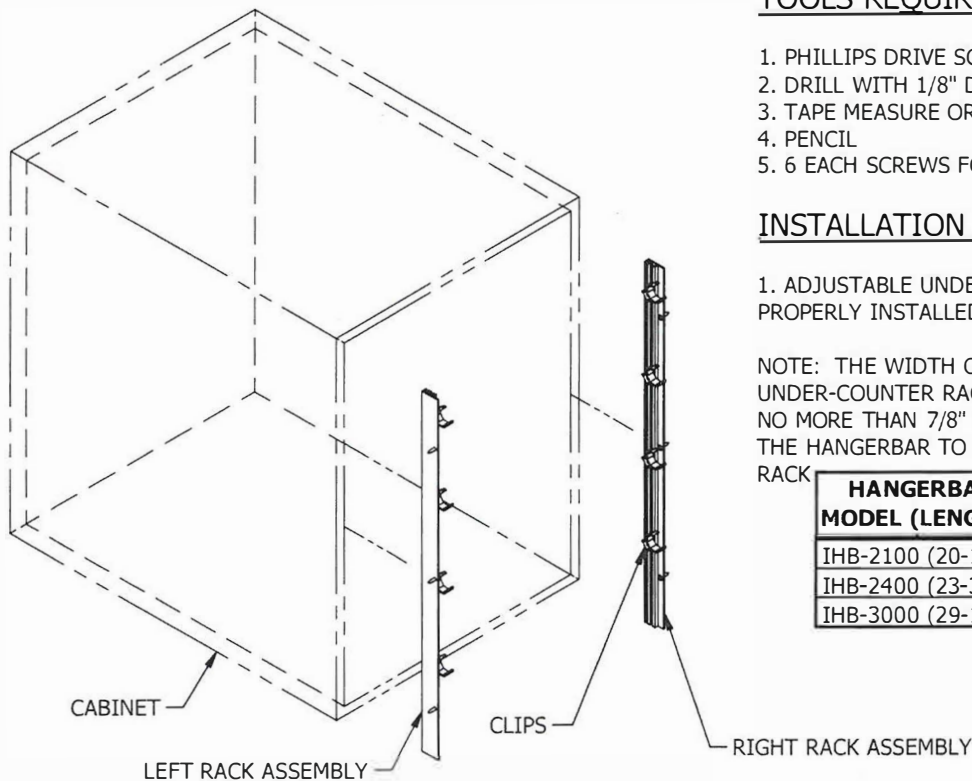

## INSTALLATION INSTRUCTIONS, CONT'D:


2. POSITION THE LEFT AND RIGHT RACK ASSEMBLIES IN THE CABINET WITH THE FRONT EDGE OF THE RACK ASSEMBLY 9" FROM THE FRONT EDGE OF THE CABINET AND RESTING ON THE BOTTOM OF THE CABINET. THE CLIPS SHOULD BE ON THE INSIDE WITH THE CLIP OPENING FACING OUT.

NOTE: TO ACCOMMODATE LARGER HANGERS, ADJUST THE DEPTH OF THE RACK ASSEMBLIES TO ENSURE THAT LARGEST SIZE HANGER FITS INSIDE THE OPENING OF THE CABINET.

3. USING THE RACK ASSEMBLIES AS TEMPLATES, MARK THE LOCATION OF THE (3) HOLES ON BOTH SIDE WALLS AND REMOVE THE RACK ASSEMBLIES

4. DRILL STARTER HOLES IN THE MARKED LOCATIONS. (BE SURE NOT TO DRILL ALL THE WAY THROUGH THE CABINET WALLS.)

5. INSTALL THE RACK ASSEMBLIES AND SECURE USING 6 PROPER SCREWS. SCREWS TO BE SUPPLIED BY INSTALLER BASED ON CABINET DESIGN.

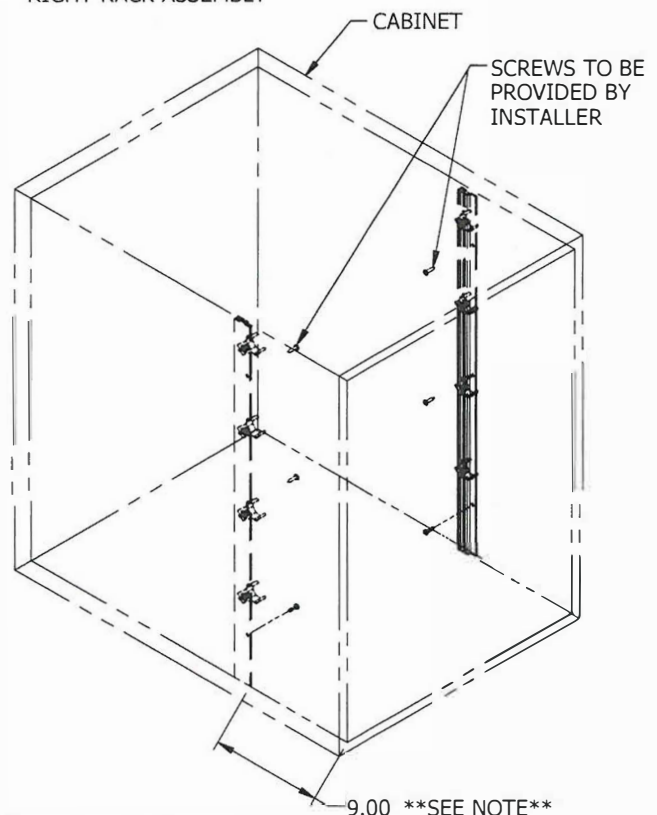

**International Retail Services Group**

(800) 822-4264 · Web Site: [www.irsg.com](http://www.irsg.com)